




- 1** 1a (2) 5/8" (1.6 cm)
PN 2395
- (2) PN 7348
- (2) PN 2394

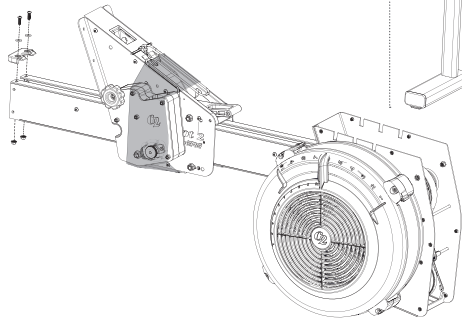

- 1b** (4) 3/4" (1.9 cm)
PN 2233

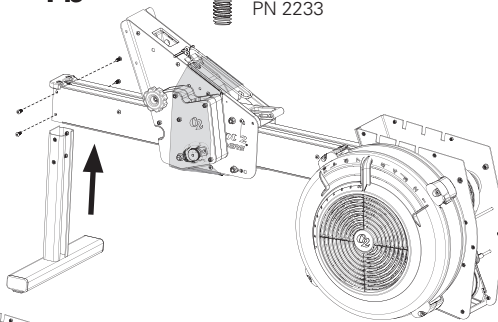


- 2** (3) 5/8" (1.6 cm)
PN 2395
- (3) PN 2394

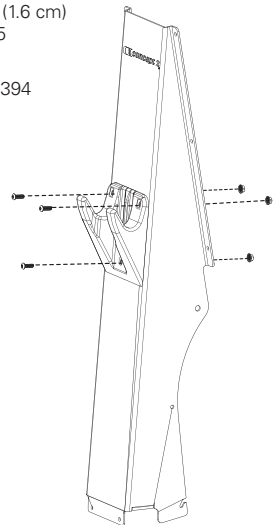


- 3** (4) 3/4" (1.9 cm)
PN 2233


3a

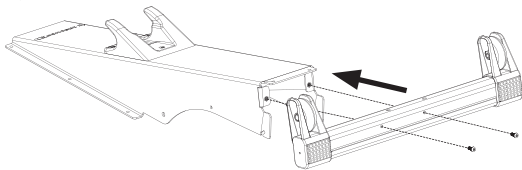


3b

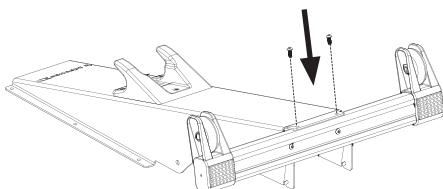

4

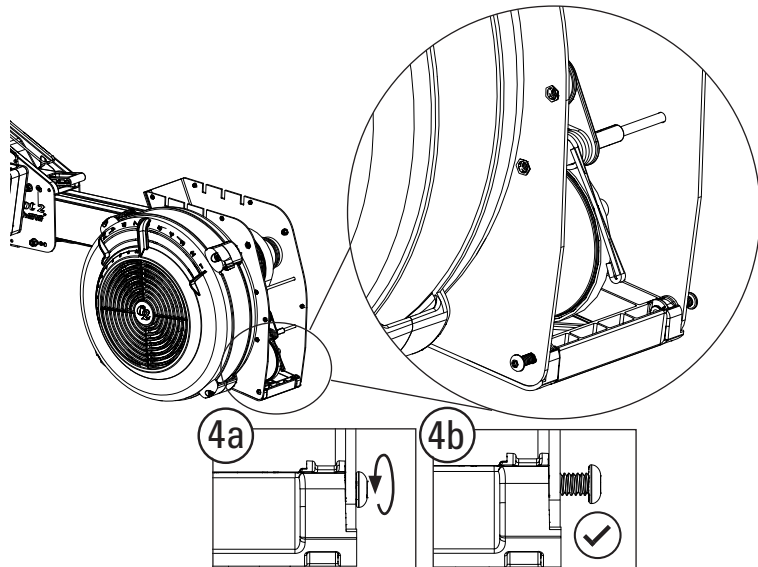

5a

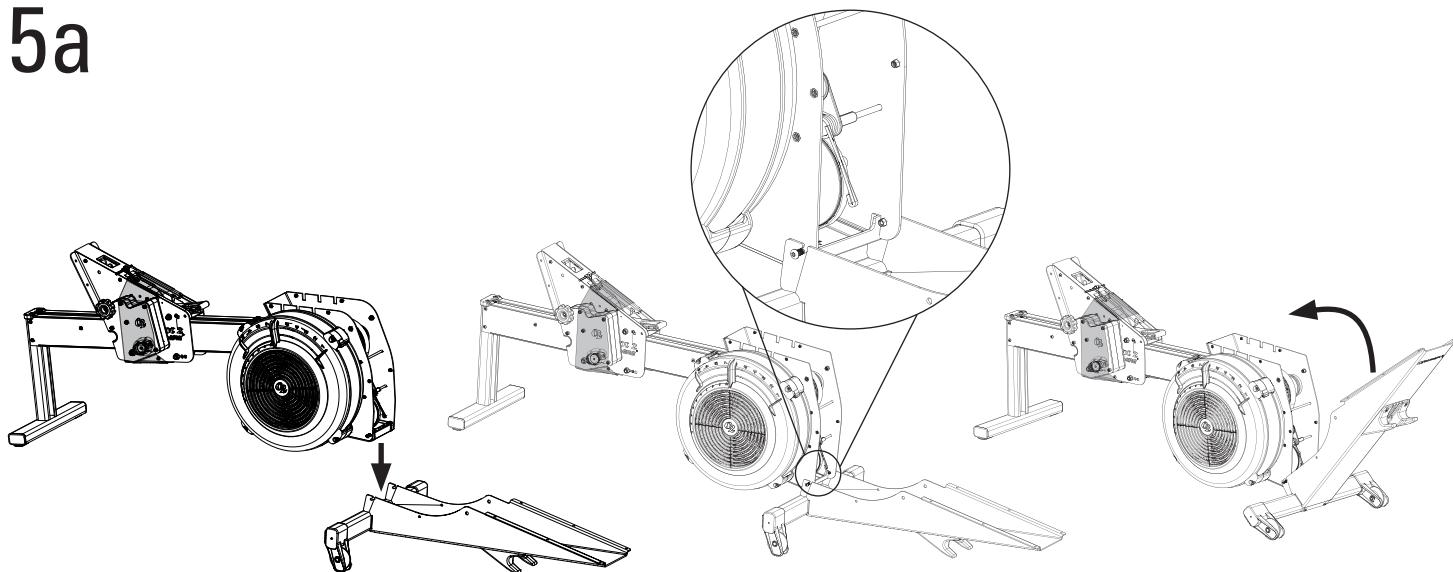

5b





(2) 3/4" (1.9 cm)
PN 2233



(2) 3/4" (1.9 cm)
PN 7263


IMPORTANT: Confirm all 6 fasteners are tight.

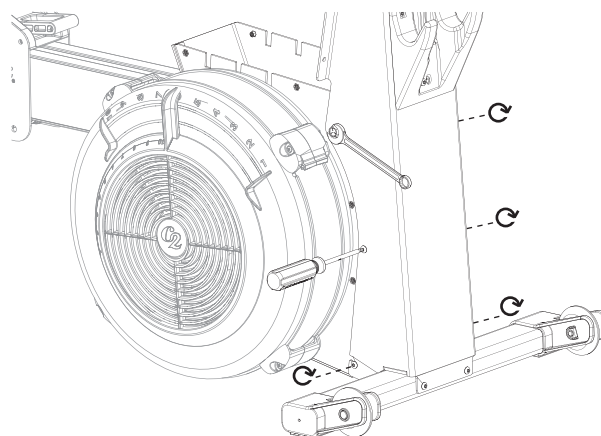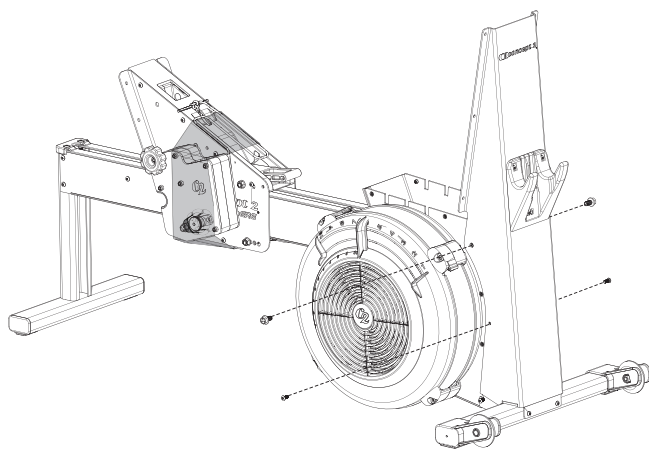

6




(4) 3/4" (1.9 cm)
PN 2233

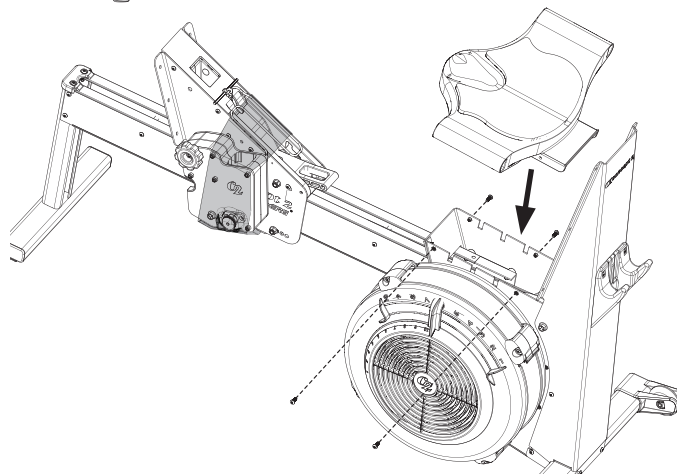

7




(6) 5/8" (1.6 cm)
PN 2395

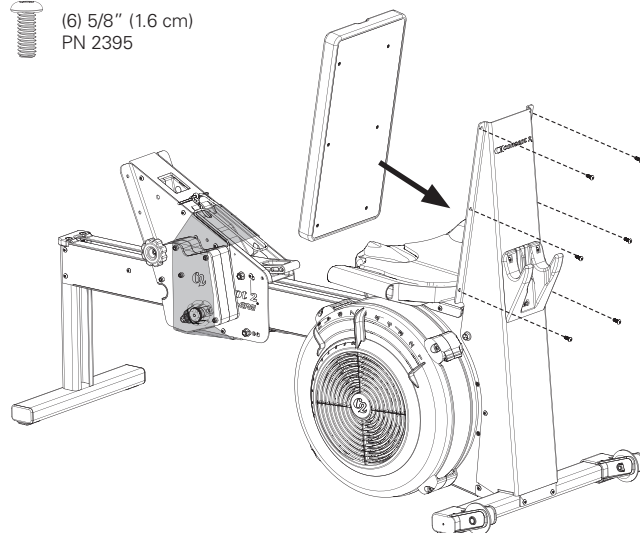

8



Caution cutting off wrap.
Use scissors. Not a knife.

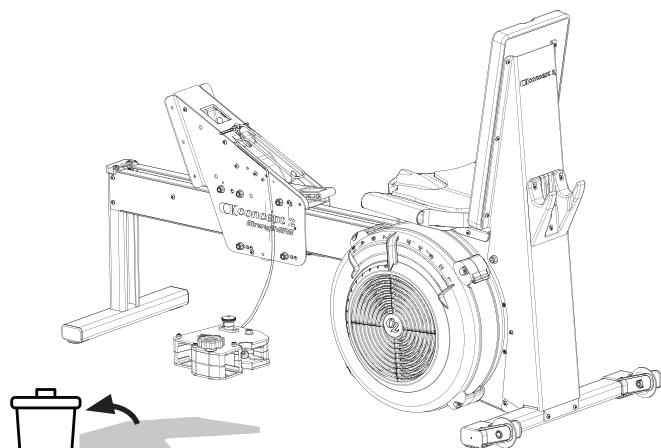


9



(6) 3" (7.6 cm)
PN 1267




(6) PN 2394

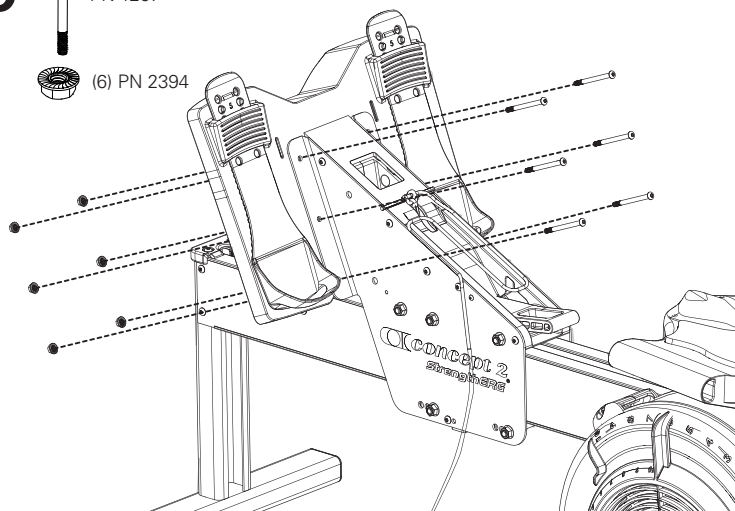


10


- (2) 4 1/4" (10.8 cm)
PN 7267
- (2)
PN 7268

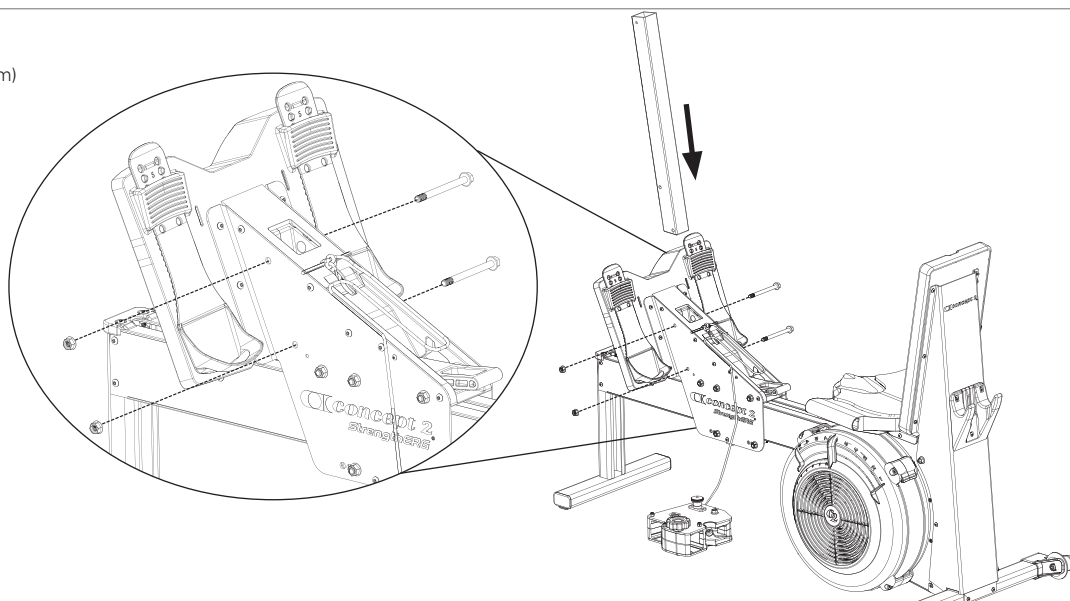


11

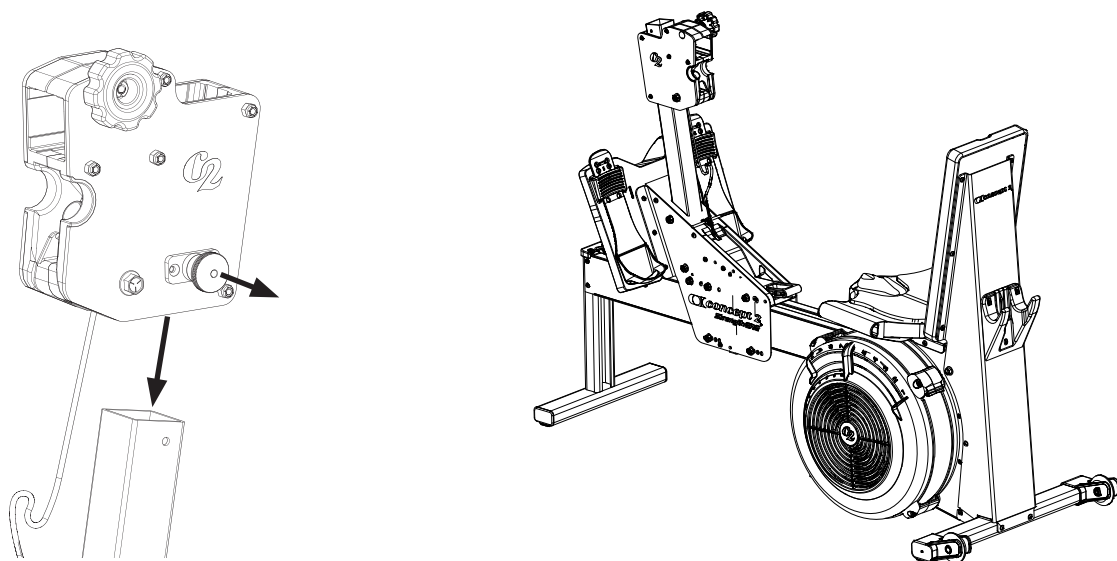


12

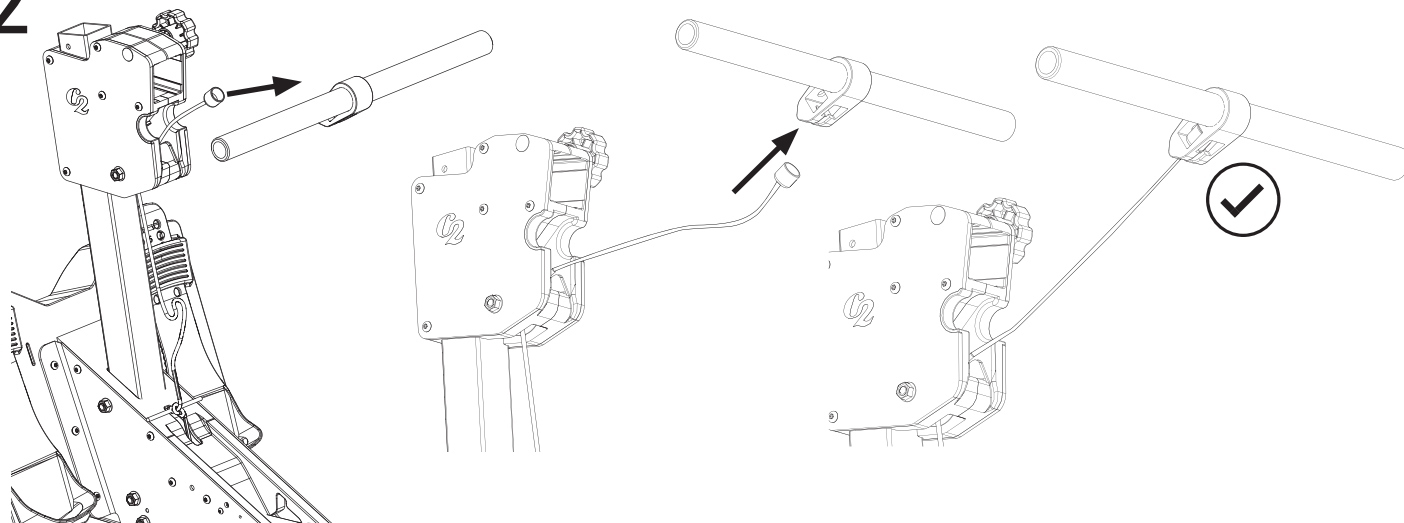

13

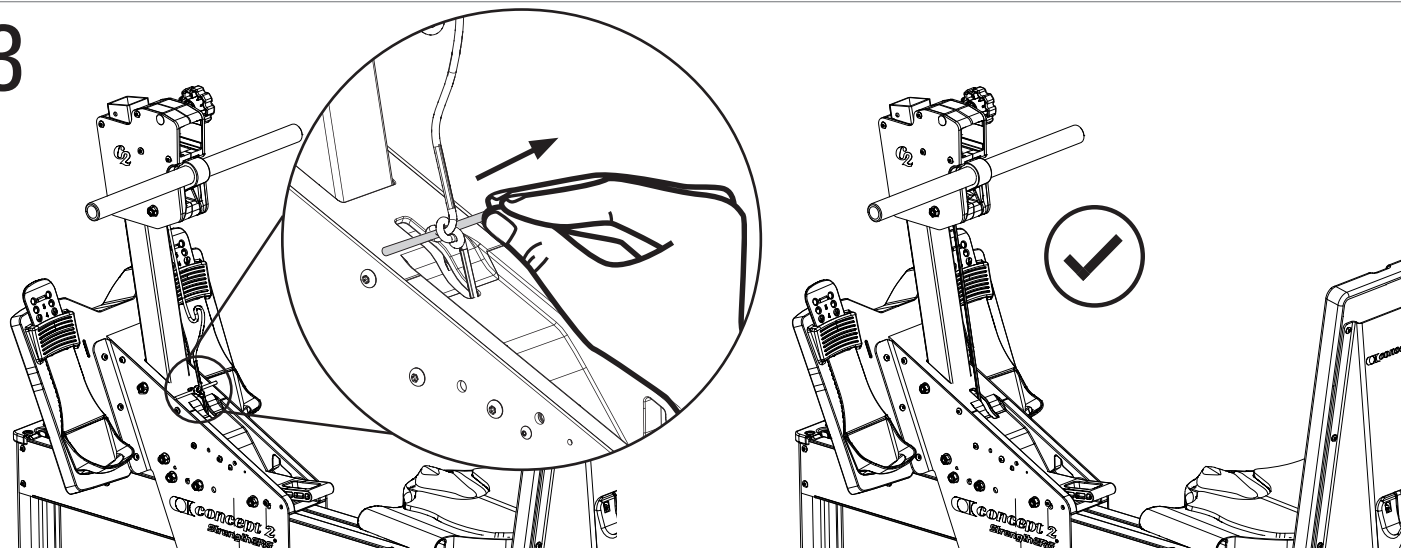


14

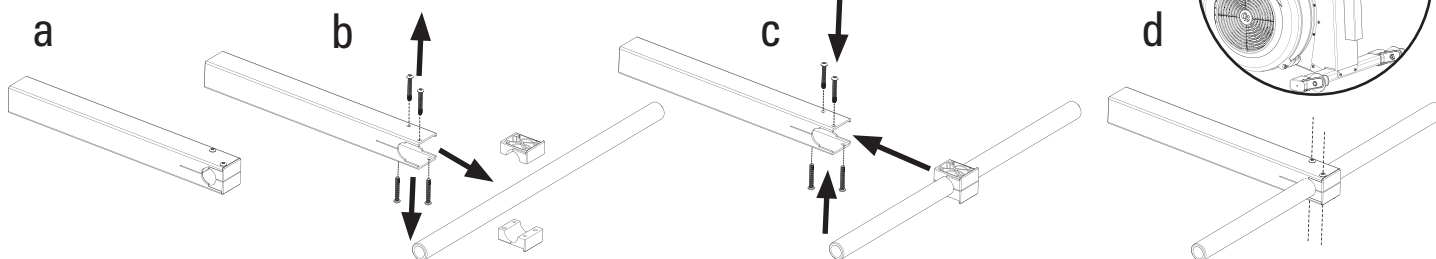

15



(2) 3/4" (1.9 cm)
PN 2233

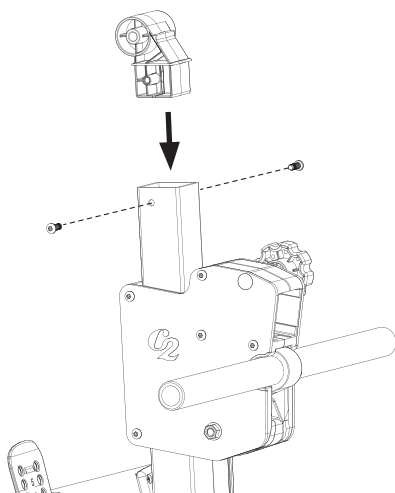

16





(1) 3" (76 cm)
PN 1268




(1) PN 1271



With Optional PM5
✓ Without PM5

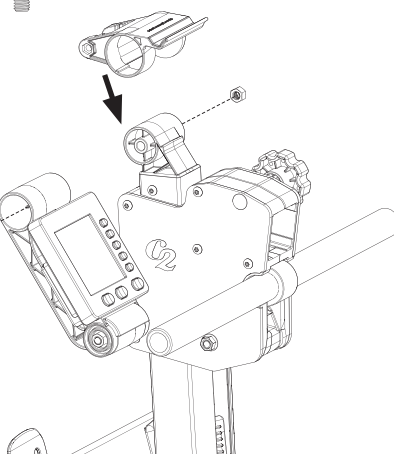

With Optional PM5

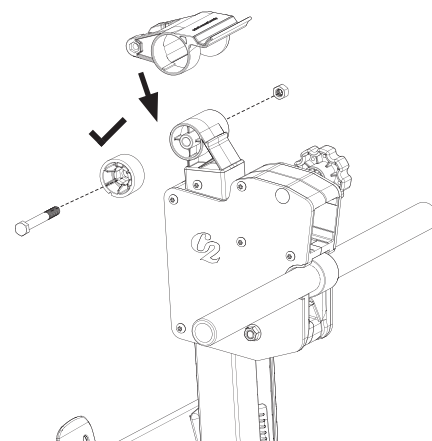

Without PM5

17




(1) 3 1/4" (8 cm)
PN 1224



(1) PN 7120




(1) 3/8" (1 cm)
PN 1238

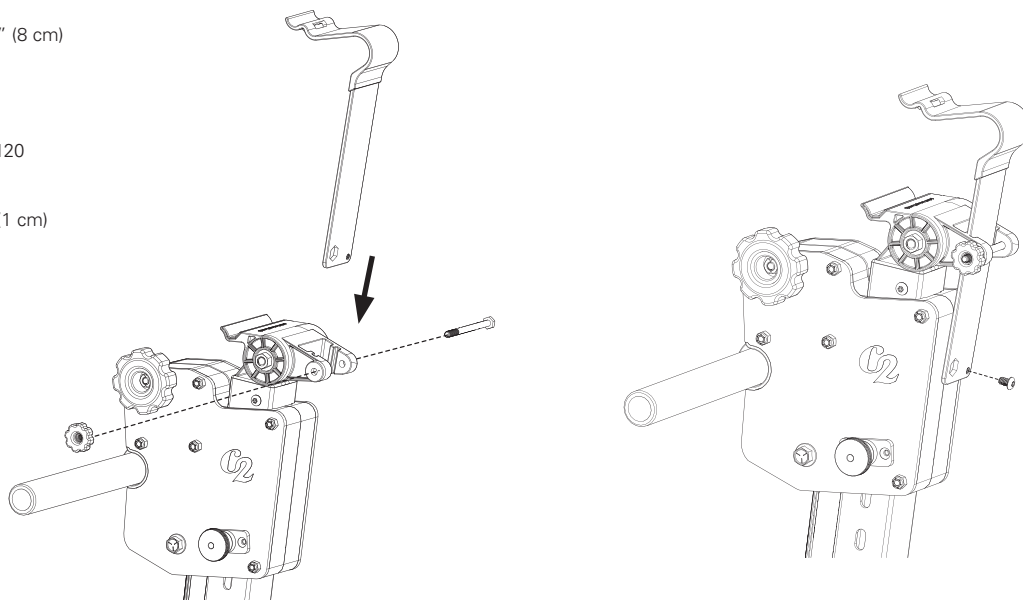


HOW TO USE ERGDATA WITH THE STRENGTHERG WITHOUT A PM5




1

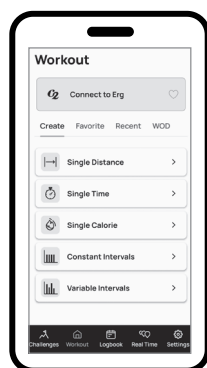

2

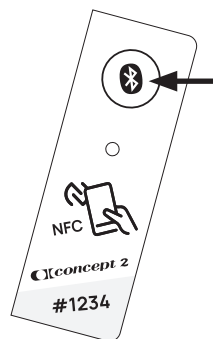


3

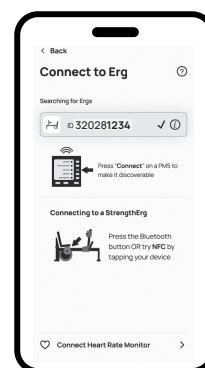


4




HOW TO CONNECT TO ERLINK WITH A PM5

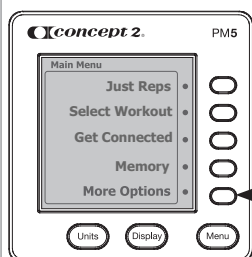


1

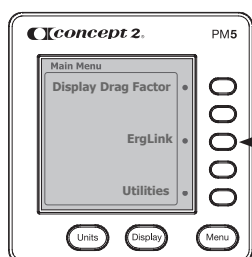


2

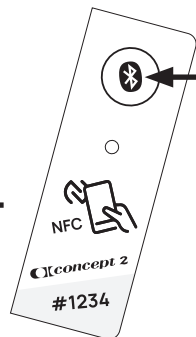

3

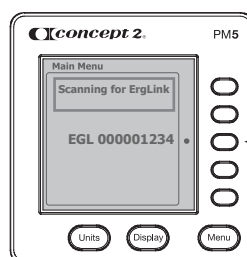




4

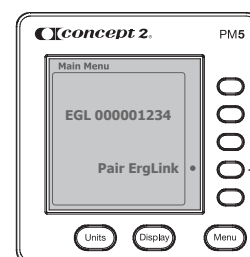

5



How to Use the Device Holder

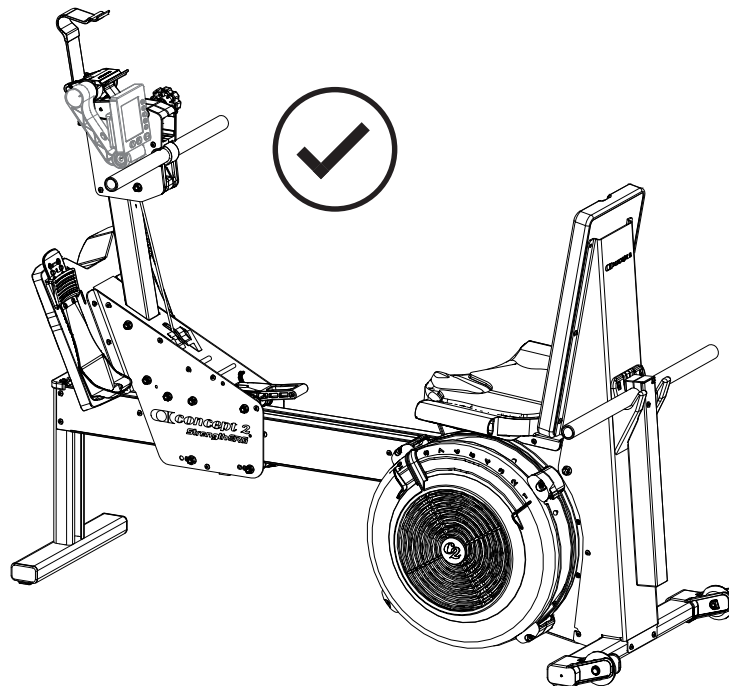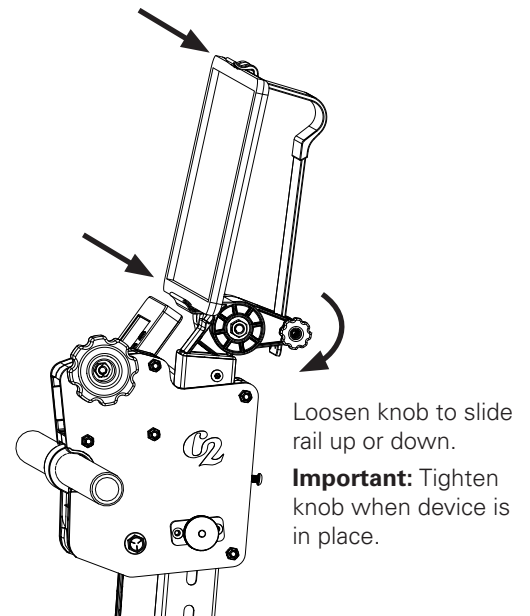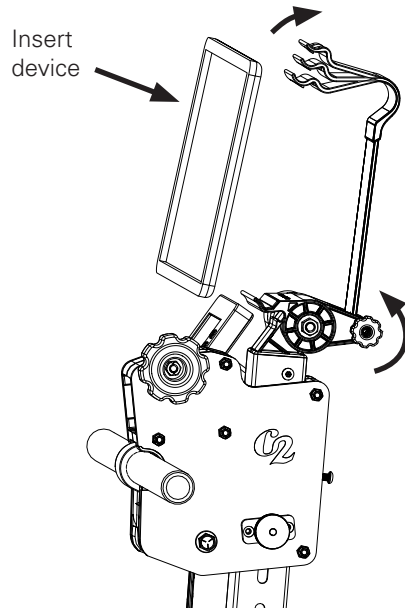

Questions? Comments? Problems?

Contact Concept2 directly at 800.245.5676
(US and Canada)
Or visit us online: concept2.com

