

Generator Base Replacement

Materials Needed

- T-27 Driver
- BikeErg Generator Base PN2403

Procedure


1. Remove the 2 T-27 screws holding the Generator Base Cover onto the frame of the BikeErg.



2. Flip the Generator over to access the two wires plugged into the Generator base. Take note of how they are routed into the cover.



3. Pull the connectors on the two wires out of the Generator Base by the edge on the white connector, not the wires themselves.

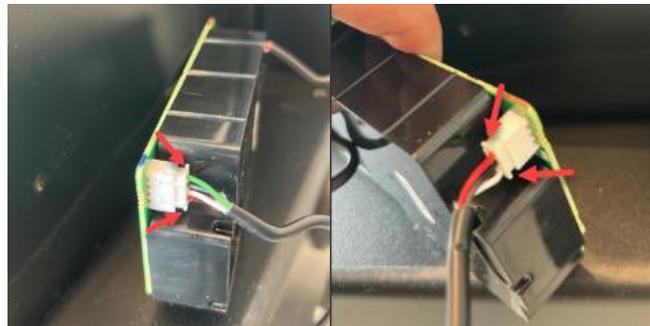

BikeERG®

4. Plug the two wires into the new Generator Base and route the wires through the channels as shown.



5. Put the Generator Base back into the Generator Base Cover and put the assembly back in place next to the flywheel.

Important: Ensure the wires are routed through the openings in the Generator Base Cover before tightening the cover onto the frame.



6. Tighten the 2 T-27 screws holding the assembly to the frame and ensure the monitor cable is secure in the hook on the handlebar post.

